


This document describes on proper antenna direction as well as the location of installation. Adjust direction of the antenna according to how you have installed the unit.


* This Installation Guide has been translated to some other languages. Other language versions of this Installation Guide can be found on our website. (<http://www.silexeurope.com/>)

1. Change the Antenna Direction

When placing the unit on its side

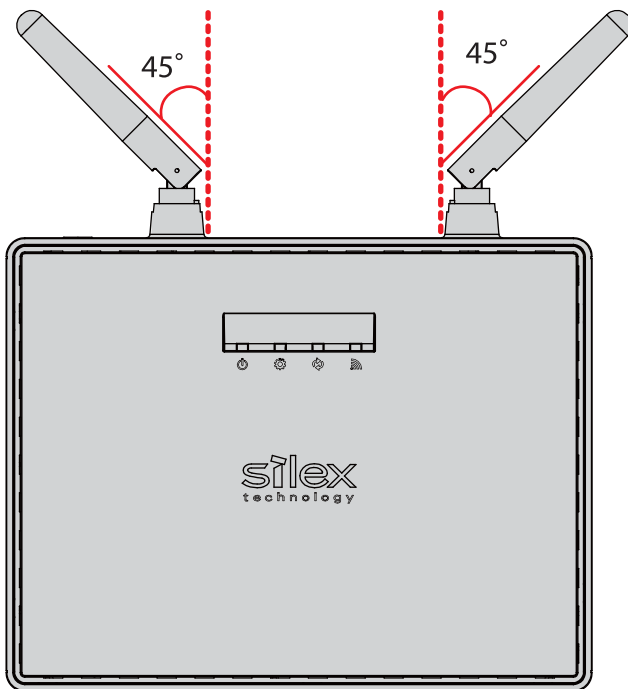

Tilt each antenna outward at a 45 degree angle.

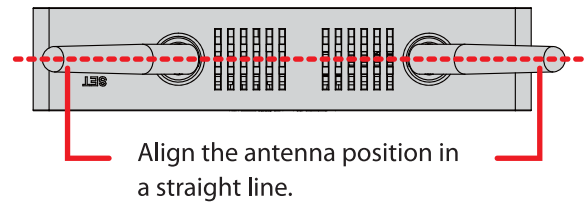

NOTE



- * Do not push the antenna to a wrong direction.
- * When you turn the antenna, please be sensitive to the limit of its stopper.

When placing the unit on its bottom

Tilt each antenna outward at a 45 degree angle. See the image below to tilt the antenna at a correct angle.


NOTE

- * Do not push the antenna to a wrong direction.
- * When you turn the antenna, please be sensitive to the limit of its stopper.

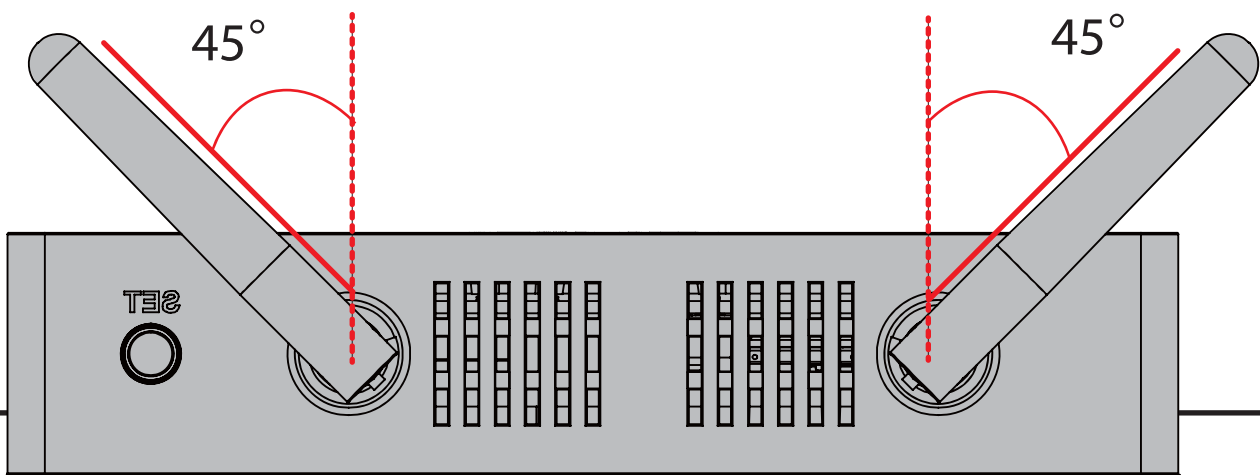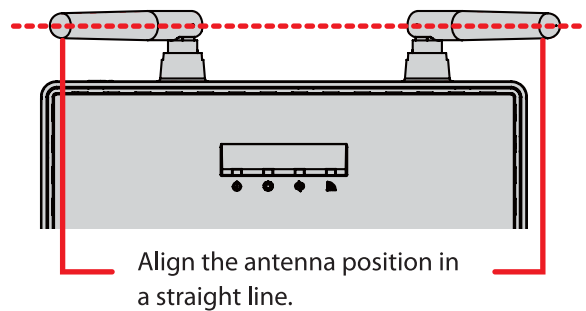


2. Location of Installation


When hanging the unit horizontally on a wall

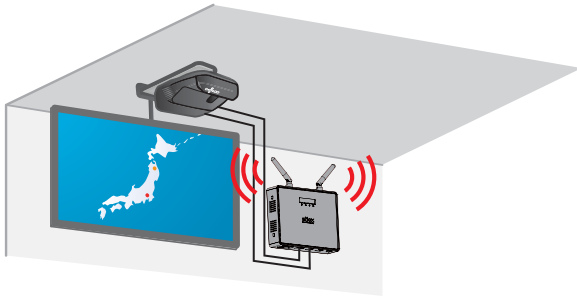


Hang the unit on higher position of the wall to make sure of a good line of sight to terminal devices.

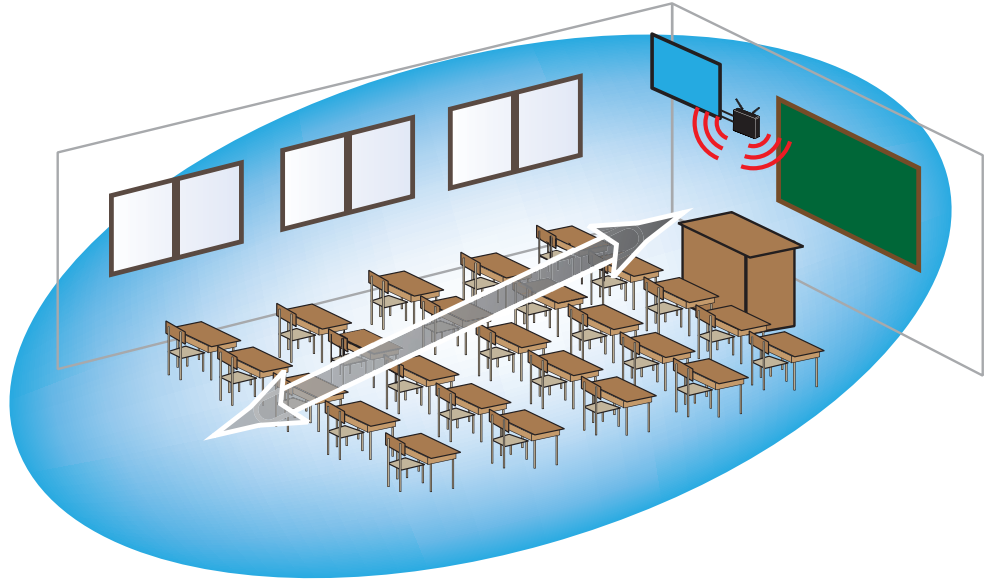

When placing the unit on a table

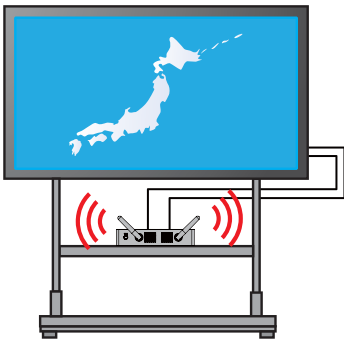

Place the unit on a table with good line of sight. Make sure that antenna faces the direction of terminal devices.

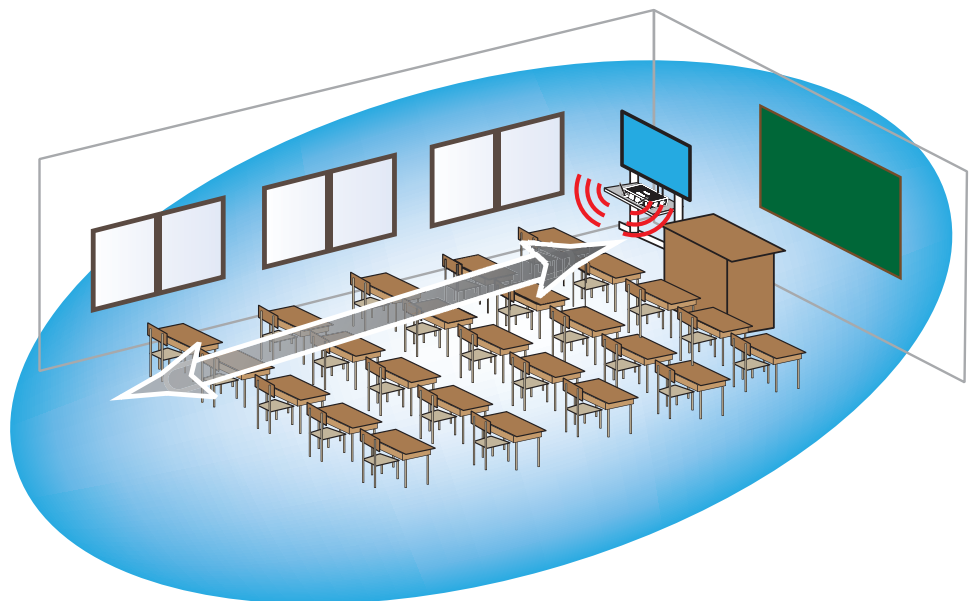

NOTE

* Place the unit on a wood or plastic table.