


This document describes on proper antenna direction as well as the location of installation. Adjust direction of the antenna according to how you have installed the unit.


\* This Installation Guide has been translated to some other languages. Other language versions of this Installation Guide can be found on our website. (<http://www.silexeurope.com/>)

## 1. Change the Antenna Direction

### When placing the unit on its side

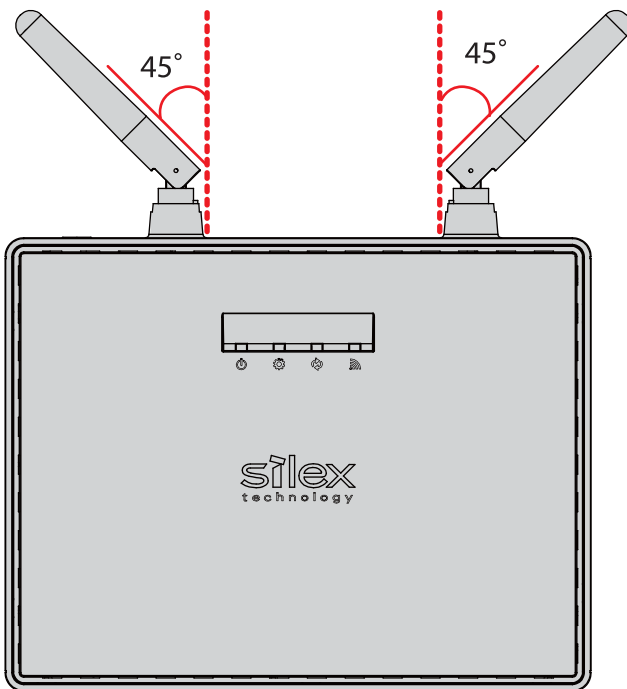

Tilt each antenna outward at a 45 degree angle.

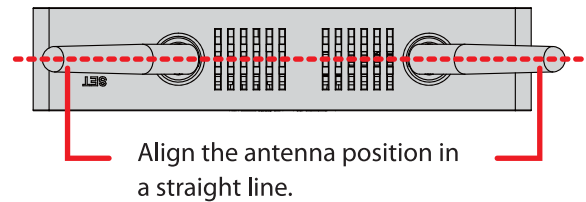

**NOTE**



- \* Do not push the antenna to a wrong direction.
- \* When you turn the antenna, please be sensitive to the limit of its stopper.

### When placing the unit on its bottom

Tilt each antenna outward at a 45 degree angle. See the image below to tilt the antenna at a correct angle.


**NOTE**

- \* Do not push the antenna to a wrong direction.
- \* When you turn the antenna, please be sensitive to the limit of its stopper.

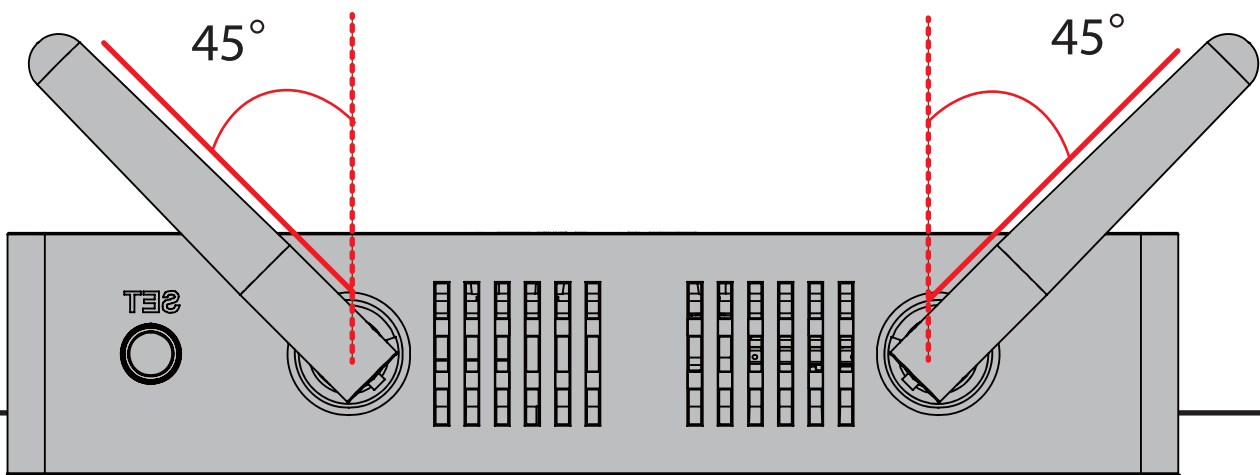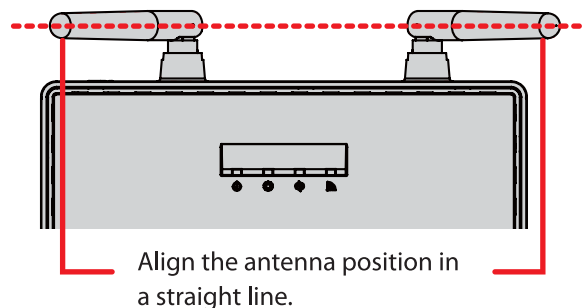


## 2. Location of Installation


### When hanging the unit horizontally on a wall

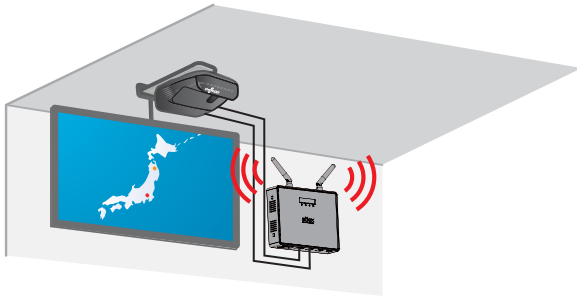


Hang the unit on higher position of the wall to make sure of a good line of sight to terminal devices.

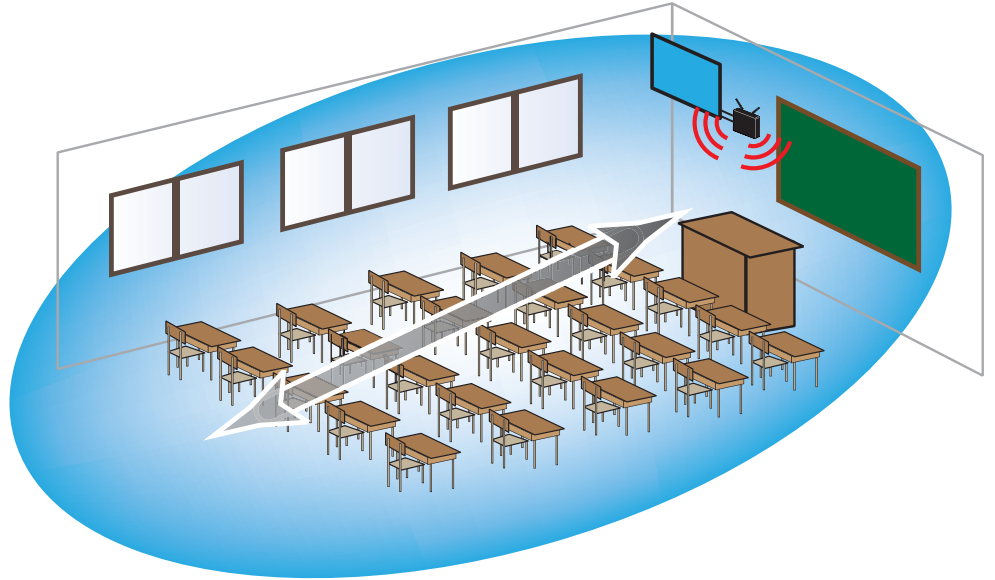

### When placing the unit on a table

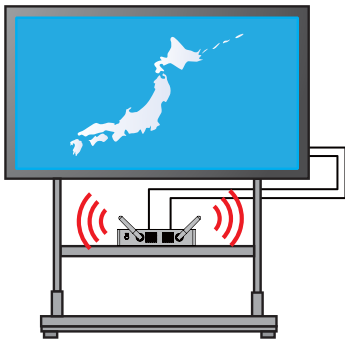

Place the unit on a table with good line of sight. Make sure that antenna faces the direction of terminal devices.

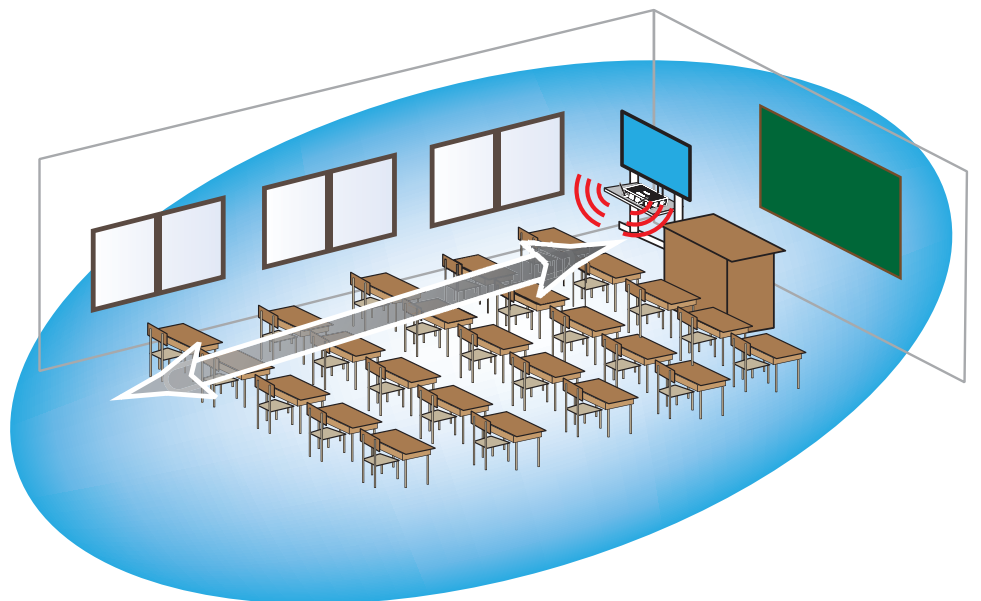

#### NOTE

\* Place the unit on a wood or plastic table.